



# ThinPrint® Gateway TPG-25 Ouick Installation Guide

#### Overview [en]

This Quick Installation Guide provides a description of the installation of the TPG-25. It contains the following information:

- General Information
- **Safety Regulations**
- Hardware Installation
- Software Installation
- **Getting Started**
- Configuring the TPG-25

Please note the table of contents on page 3. Should you have any further questions, please contact our support hotline.

Monday - ThursdayFriday

**+49 (0)521 94226-44** 

support@seh.de


#### Überblick [de]

Dieser Quick Installation Guide beinhaltet eine Beschreibung der Installation des TPG-25. Sie erhalten die folgenden Informationen:

- Allgemeine Information
- Sicherheitsvorschriften
- Hardware-Installation
- Software-Installation
- Erste Schritte
- TPG-25 konfigurieren

Beachten Sie das Inhaltsverzeichnis auf Seite 15. Falls Sie noch Fragen haben, kontaktieren Sie unsere Support-Hotline.

8:00 a.m. to 4:45 p.m. and 8:00 a.m. to 3:15 p.m. (CET)

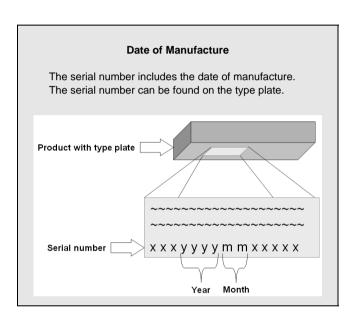

General Information	4
Purpose	.4
Scope of Supply	.4
Technical Data	.5
LED Display	.6
Safety Regulations	8
Hardware Installation	9
Software Installation 1	0
First Steps with the InterCon-NetTool	1
Starting the InterCon-NetTool	
Assigning an IP Address to the TPG-25	
Configuring the TPG-25	3



#### General Information

#### **Purpose**

The ThinPrint® Gateway 'TPG-25' decompresses ThinPrint print jobs and sends them in a decrypted way to the relevant network printers. To this purpose, the TPG-25 contains a fully embedded ThinPrint client. The TPG-25 allows you to embed up to two network printers into the network.

The administration of the TPG-25 is done via the 'TPG Control Center'

#### **Scope of Supply**

Please check the package content before getting started:



TPG-25

ThinPrint® Gateway



Ouick Installation Guide

The Quick Installation Guide provides a brief description of the installation of the TPG-25. (This document)




Power pack

External power pack

[en]

#### **Technical Data**

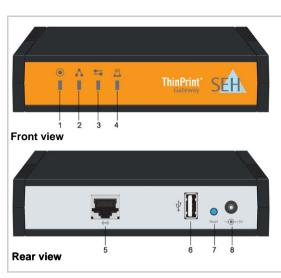

- 1) Activity LED (green)
- 2) Network status LED (green)
- Server communication LED (green/ orange/red)
- 4) Print status LED (green/orange/red)
- 5) Network connector (RJ-45) for 1000BaseT, 100BaseTX and 10BaseT
- 6) USB port for the saving of parameters, buffering of print jobs, etc.
- 7) Status/reset button
- 8) Connector for the included power pack

Properties		Values	
Network connection	logical: physical:		
Device connection		- 1 x USB 2.0 HS	
Current input		- 500 mA @ 5 VDC (plus 500 mA for the USB port)	
Operating environmen	nt	- Ambient temperature: 5 - 40 °C - Relative humidity: 20 - 80 %	
Dimensions		- Width: 140 mm - Height: 32 mm - Depth: 99 mm - Weight: 150 g	

## **LED Display**

The LEDs of the TPG-25 provide information about its status.

LED	Action	Color	Description
Activity	flashing at irregular intervals	green	Indicates the exchange of network data packets.
	flashing	green	The TPG is in the BIOS mode.
Network status	permanently on	green	There is a connection to the network.
	permanently off	-	There is no connection to the network.
Server communication	permanently off	-	The ThinPrint Connection Service has not been configured. There is currently no communication with the ThinPrint server.
	permanently on	green	The ThinPrint Connection Service has been configured and established. There is currently no communication with the ThinPrint server.
	flashing	green	A: The ThinPrint Connection Service has not been configured. Currently communication takes place with the ThinPrint server.  B: The ThinPrint Connection Service has been configured and established. Currently communication takes place with the ThinPrint server.
	permanently on	orange	The ThinPrint Connection Service has been configured, but not established. There is currently no communication with the ThinPrint server.
	flashing	orange/ green	The ThinPrint Connection Service has been configured, but not established. Currently communication takes place with the ThinPrint server.
	lighting up once (1 s)	red	The connection to the ThinPrint server has been denied by the TPG.

LED	Action	Color	Description
Print status	permanently on	green	Printers have been configured. The status and the messages of all printers will be queried.
	permanently on	orange	Printers have been configured. The status and the messages of some printers will be queried.
	flashing	orange/ green	Printers have been configured. TPG Monitoring has only been established for some printers. Print jobs will be buffered for printers of which the status and messages will not be queried.
	permanently on	red	Printers have been configured. No printer statuses and messages will be queried.
	flashing	red/ green	Printers have been configured. No printer statuses and messages will be queried. All print jobs will be buffered.
	permanently off	-	No printers have been configured.



For further information about the query of printer messages and printer statuses, refer to the TPG user manual.

# **Safety Regulations**

TPGs are network devices for use in office environments. The TPG is used in TCP/IP networks.




Before starting the initial setup procedure and during the operation of the TPG, please note the following safety regulations. Their purpose is to protect yourself and others from personal injuries, and avoid damage to the equipment.

- Read the documentation and make sure that your system meets the requirements listed therein.
- Avoid contact with humidity or liquids.
- The device must only be connected and operated if it is in perfect condition.
- Make sure that no-one steps on or stumbles over the cables.
- If the supplied power cord cannot be used in your country, acquire an appropriate power cord that suits national provisions. For more information, please consult your retailer.
- Do not connect a telephone cable to the RJ-45 connector. The RJ-45 connector may only be connected to SELV voltages. For the connection to the RJ-45 connector only S/UTP cabling (category 5 or better) may be used. The shielding must fit flushly to the connector.
- The device must only be operated using the power pack included in the package.
- Only use a certified USB cable (< 3 m) listed at www.usb.org.
- Do not open the housing. Do not put objects on top of the housing. The device must be placed on a solid surface with no vibration.



# Hardware Installation

The TPG-25 supports communication between up to two network printers and one ThinPrint server.

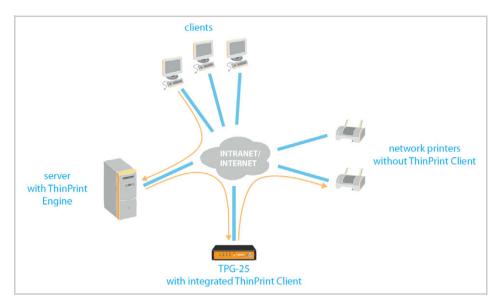



#### Proceed as follows:





Connect the power cord to the TPG-25. 2.





#### Software Installation

The 'InterCon-NetTool' has been developed by SEH Computertechnik GmbH for the administration of SEH network devices. By means of this tool you can assign a suitable IP address to the TPG-25, as described below.

In order to use the InterCon-NetTool, the program must be installed on a computer. Different installation files are available, depending on the operating system.

First, you have to download the installation file for the InterCon-NetTool from the homepage of the SEH Computertechnik GmbH:

http://www.seh-technology.com/products/thinprint-gateways/products/ tpg-25-downloads.html



Scan this QR code using your smart phone to get direct access to the homepage.



#### Proceed as follows:


- 1. Start the InterCon-NetTool installation file.
- 2. Select the desired language.
- Follow the installation routine. 3
- The InterCon-NetTool will be installed on your client.



# First Steps with the InterCon-NetTool

#### Starting the InterCon-NetTool

Start the InterCon-NetTool on your client via the Windows start menu. (Start --> All Programs --> SEH Computertechnik GmbH --> InterCon-NetTool)

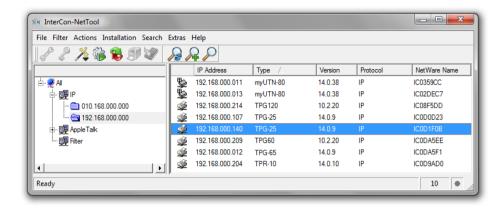

After the InterCon-NetTool was started, it searches the network for existing devices and displays them in the 'device list'.



During the initial configuration, the client and the TPG-25 must be assigned to the same local network segment.



Detailed information on how to use the InterCon-NetTool can be found in the Online Help. To start the Online Help, select Help - Online Help from the menu bar.

#### Assigning an IP Address to the TPG-25

Once the TPG-25 is connected to the network, it checks whether an IP address can be obtained via the boot protocols BOOTP or DHCP. If this is not the case, the TPG-25 assigns itself an IP address via ZeroConf from the address range (169.254.0.0/16) which is reserved for ZeroConf.


Once the TPG-25 has automatically received an IP address via a boot protocol, you can save a freely definable IP address in the TPG-25.

Wizards facilitate the installation and configuration of network devices via the InterCon-NetTool. Wizards are subprograms aimed at querying required parameter values.

The 'IP Wizard' is available for the TPG-25. You can easily enter the desired IP address and save it in the TPG-25 using the IP Wizard.

- Proceed as follows:
- 1. Start the InterCon-NetTool.
- 2. Mark the TPG-25 in the device list.

  The TPG-25 is displayed in the device list under IP- 'ZeroConf' with an IP address from the address range (169.254.0.0/16) which is reserved for ZeroConf.
- 3. Select Installation IP Wizard from the menu bar. The IP Wizard is started.
- 4. Follow the instructions of the IP Wizard.
- The settings are saved.

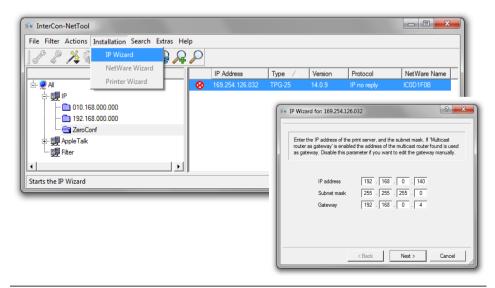



The TPG-25 can be configured and monitored via the TPR Control Center. The TPR Control Center is stored in the TPG-25 and can be launched by means of a browser (Internet Explorer, Firefox, Safari).

- Proceed as follows:
- 1. Open your browser.
- 2. Enter the IP address of the TPG-25 as the URL.
- The TPG Control Center appears in the browser.

  If the TPG Control Center is not displayed, check the proxy settings of your browser.



Detailed information about the configuration of the TPG-25 can be found in the Online Help of the TPG Control Center. To start the Online Help, click the '?' icon.

Allgemeine Information	16 16 17
Sicherheitsvorschriften	20
Hardware-Installation	21
Software-Installation	22
Erste Schritte mit dem InterCon-NetTool       2         InterCon-NetTool starten       2         TPG-25 eine IP-Adresse zuweisen       2	23
TPG-25 konfigurieren	25



# **Allgemeine Information**

#### Verwendungszweck

Das ThinPrint® Gateway 'TPG-25' dekomprimiert ThinPrint-Druckaufträge und sendet sie entschlüsselt an die entsprechenden Netzwerkdrucker weiter. Dafür enthält das TPG-25 einen vollständig integrierten ThinPrint Client. Über das TPG-25 lassen sich bis zu zwei Netzwerkdrucker in das Netz einbinden.

Die Verwaltung des TPG-25 erfolgt über das 'TPG Control Center'.

#### Lieferumfang

Bitte überprüfen Sie den Packungsinhalt auf Vollständigkeit, bevor Sie die Installation beginnen:



TPG-25

ThinPrint® Gateway



Ouick Installation Guide


Der Quick Installation Guide beinhaltet eine kurze Beschreibung der Installation des TPG-25. (Dieses Dokument)



Netzteil

Externes Netzteil

#### **Technische Daten**

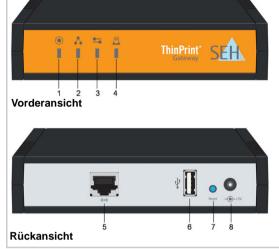

- 1) Activity-LED (grün)
- 2) Netzwerkstatus-LED (grün)
- Serverkommunikation-LED (grün/ orange/rot)
- 4) Druckstatus-LED (grün/orange/rot)
- 5) Netzwerkanschluss (RJ-45) für 1000BaseT, 100BaseTX und 10BaseT
- USB-Port u.a. für die Parametersicherung und das Zwischenspeichern von Druckaufträgen
- 7) Status-/Reset-Taster
- 8) Anschluss für die Stromversorgung über das mitgelieferte Netzteil

Eigenschaften		Werte		
Netzwerkanschluss	Logisch: Physisch:	- IEEE 802.3 - RJ-45 (S/UTP Cat. 5)		
Geräteanschluss		- 1 x USB 2.0 HS		
Stromaufnahme		- 500 mA bei 5 VDC (plus 500 mA für den USB-Port)		
Betriebsumgebung		- Umgebungstemperatur: 5 - 40 °C - Relative Luftfeuchtigkeit: 20 - 80 %		
Abmessungen		- Breite: 140 mm - Höhe: 32 mm - Tiefe: 99 mm - Gewicht: 150 g		

#### LED-Anzeige

Durch die Interpretation des LED-Leuchtverhaltens kann der Zustand des TPG-25 ermittelt werden.

LED	Aktion	Farbe	Beschreibung
Activity	unregel- mäßiges Blinken	grün	Signalisiert den Austausch von Netzwerk- Datenpaketen.
	Blinken	grün	Das TPG befindet sich im BIOS-Modus.
Netzwerkstatus	Dauer-An	grün	Eine Verbindung zum Netzwerk ist vorhanden.
	Dauer-Aus	-	Es besteht keine Verbindung zum Netzwerk.
Server- kommunikation	Dauer-Aus	-	Der ThinPrint Connection Service ist nicht konfiguriert. Momentan findet keine Kommunikation mit dem ThinPrint-Server statt.
	Dauer-An	grün	Der ThinPrint Connection Service ist konfiguriert und etabliert. Momentan findet keine Kommunikation mit dem ThinPrint-Server statt.
	Blinken	grün	A: Der ThinPrint Connection Service ist nicht konfiguriert. Momentan wird mit dem ThinPrint-Server kommuniziert.     B: Der ThinPrint Connection Service ist konfiguriert und etabliert. Momentan wird mit dem ThinPrint-Server kommuniziert.
	Dauer-An	orange	Der ThinPrint Connection Service ist konfiguriert aber nicht etabliert. Momentan findet keine Kommunikation mit dem ThinPrint-Server statt.
	Blinken	orange/ grün	Der ThinPrint Connection Service ist konfiguriert aber nicht etabliert. Momentan wird mit dem ThinPrint-Server kommuniziert.
	einmaliges Aufleuchten (1 s)	rot	Das TPG hat die Verbindung zum ThinPrint- Server abgelehnt.

LED	Aktion	Farbe	Beschreibung
Druckstatus	Dauer-An	grün	Es sind Drucker konfiguriert. Der Status und die Meldungen aller Drucker werden abgefragt.
	Dauer-An	orange	Es sind Drucker konfiguriert. Der Status und die Meldungen einiger Drucker werden abgefragt.
	Blinken	orange/ grün	Es sind Drucker konfiguriert. Der Status und die Meldungen einiger Drucker werden abgefragt. Druckaufträge werden zwischengespeichert für Drucker, deren Status und Meldungen nicht abgefragt werden.
	Dauer-An	rot	Es sind Drucker konfiguriert. Es werden keine Status und Meldungen von Druckern abgefragt.
	Blinken	rot/grün	Es sind Drucker konfiguriert. Es werden keine Status und Meldungen von Druckern abgefragt. Alle Druckaufträge werden momentan zwischengespeichert.
	Dauer-Aus	-	Es sind keine Drucker konfiguriert.



Nähere Informationen über die Abfrage von Druckermeldungen und -status, entnehmen Sie der TPG-Benutzerdokumentation.

## Sicherheitsvorschriften

TPG sind Netzwerkgeräte für den Gebrauch in Büroumgebungen. Das TPG wird in TCP/IP-Netzwerken eingesetzt.




Beachten Sie vor Inbetriebnahme und beim Betrieb des TPG die folgenden Sicherheitsvorschriften, um sich und andere vor Personenschäden zu schützen sowie Beschädigungen am Gerät zu vermeiden.

- Lesen Sie die Dokumentation und stellen Sie sicher, dass Ihr System den aufgeführten Anforderungen entspricht.
- Das Gerät darf nicht mit Feuchtigkeit oder Flüssigkeit in Berührung kommen.
- Das Gerät darf nur in unversehrtem Zustand angeschlossen und betrieben werden.
- Verlegen Sie alle Kabel so, dass niemand darauf treten oder darüber stolpern kann
- Falls das beiliegende Netzkabel für Ihr Land nicht einsetzbar ist, beschaffen Sie ein passendes Netzkabel mit der jeweiligen nationalen Zulassung. Fragen Sie hierzu Ihren Fachhändler.
- Schließen Sie keine Telefonleitungen an den RJ-45-Stecker an. An diesen darf nur Sicherheitskleinspannung angeschlossen werden. Verwenden Sie für den Anschluss an den RJ-45-Stecker nur S/UTP-Kabel (Kategorie 5 oder besser). Kabelschirm und Steckerschirm des Kabels müssen flächig verbunden sein.
- Das Gerät darf nur mit dem mitgelieferten Netzteil betrieben werden.
- Verwenden Sie als USB-Kabel ein zertifiziertes USB-Kabel (< 3 m), das unter www.usb.org gelistet ist.
- Öffnen Sie nicht das Gehäuse. Stellen Sie keine Gegenstände auf das Gehäuse. Das Gerät muss auf einer stabilen, vibrationsarmen Oberfläche stehen.



# Hardware-Installation

Das TPG-25 ermöglicht bis zu zwei Netzwerkdruckern die Kommunikation mit einem ThinPrint-Server.

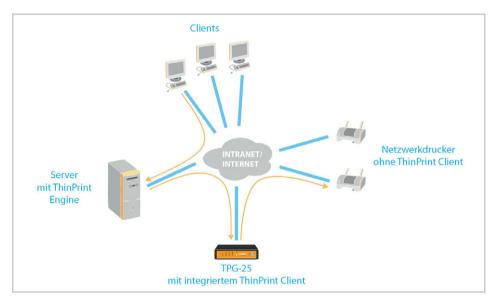



Gehen Sie wie folgt vor:

Verbinden Sie das Netzwerkkabel (RJ-45) mit dem TPG-25. 1.



Verbinden Sie das Netzkabel mit dem TPG-25. 2.

## ■ Software-Installation

Das 'InterCon-NetTool' ist eine von der SEH Computertechnik GmbH entwickelte Software zur Administration von SEH Netzwerkgeräten. Mit diesem Tool können Sie, wie nachfolgend beschrieben, dem TPG-25 eine passende IP-Adresse zuweisen.


Um mit dem InterCon-NetTool zu arbeiten, muss das Programm auf einem Je nach Betriebssystem sind verschiedene Rechner installiert werden. Installationsdateien verfügbar.

Bitte laden Sie zuerst die Installationsdatei für das InterCon-NetTool von der SEH Computertechnik GmbH-Homepage:

> http://www.seh.de/produkte/thinprint-gateways/products/ tpg-25-downloads.html



Scannen Sie diesen QR-Code mit Ihrem Smartphone, um direkt zur Homepage zu gelangen.

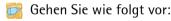


- Starten Sie die InterCon-NetTool-Installationsdatei. 1.
- Wählen Sie die gewünschte Sprache. 2.
- 3. Folgen Sie der Installationsroutine.
- Das InterCon-NetTool wird auf Ihrem Client installiert.



#### Erste Schritte mit dem InterCon-NetTool

#### InterCon-NetTool starten

Starten Sie auf Ihrem Client das InterCon-NetTool über das Windows-Startmenü. (Start --> Alle Programme --> SEH Computertechnik GmbH --> InterCon-NetTool)

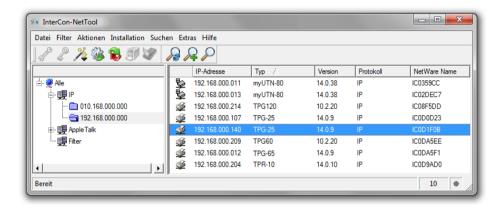

Nach dem Start sucht das InterCon-NetTool im Netzwerk nach vorhandenen Geräten und zeigt diese in der 'Geräteliste' an.



Während der Erstkonfiguration müssen der Client und das TPG-25 demselben lokalen Netzwerksegment zugeordnet sein.



Detaillierte Informationen zur Bedienung des InterCon-NetTools entnehmen Sie der Online Hilfe. Um die Online Hilfe zu starten, wählen Sie im Menii Hilfe den Befehl Online Hilfe

#### TPG-25 eine IP-Adresse zuweisen


Nachdem das TPG-25 an das Netzwerk angeschlossen ist, überprüft das TPG-25, ob es eine IP-Adresse über die Bootprotokolle BOOTP oder DHCP erhält. Ist das nicht der Fall, gibt sich das TPG-25 über ZeroConf selbst eine IP-Adresse aus dem für ZeroConf reservierten Adressbereich (169.254.0.0/16).

Nachdem das TPG-25 eine IP-Adresse automatisch über ein Bootprotokoll erhalten hat, können Sie nachträglich manuell eine freidefinierbare IP-Adresse in dem TPG-25 speichern.

Für die vereinfachte Installation und Konfiguration der Netzwerkgeräte sind Assistenten (Wizards) in dem InterCon-NetTool implementiert. Assistenten sind Teilprogramme, die gezielt benötigte Parameterwerte abfragen.

Für das TPG-25 steht der 'IP-Assistent' zur Verfügung. Über den IP-Assistenten kann die gewünschte IP-Adresse einfach eingegeben und in dem TPG-25 gespeichert werden.

- 🧰 Gehen Sie wie folgt vor:
- 1. Starten Sie das InterCon-NetTool.
- Markieren Sie das TPG-25 in der Geräteliste.
   Das TPG-25 erscheint in der Geräteliste unter dem Punkt IP 'ZeroConf' mit einer IP-Adresse aus dem für ZeroConf reservierten Adressbereich (169.254.0.0/16).
- 3. Wählen Sie im Menü Installation den Befehl IP-Assistent. Der IP-Assistent wird gestartet.
- 4. Folgen Sie den Anweisungen des IP-Assistenten.
- b Die Einstellungen werden gespeichert.

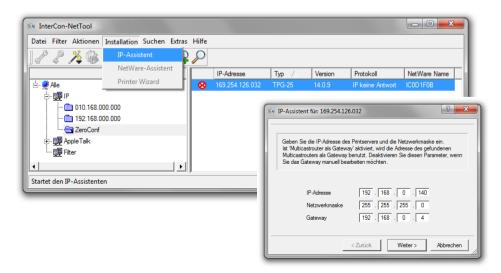



Über das TPG Control Center kann das TPG-25 konfiguriert und überwacht werden. Das TPG Control Center ist in dem TPG-25 gespeichert und kann mit einem Internet-Browser (Internet Explorer, Firefox, Safari) aufgerufen werden.

- \overline Gehen Sie wie folgt vor:
- 1. Öffnen Sie Ihren Browser.
- 2. Geben Sie als URL die IP-Adresse des TPG-25 ein.
- Das TPG Control Center wird im Browser dargestellt.
  Falls das TPG Control Center nicht angezeigt wird, überprüfen Sie die Proxy-Einstellungen Ihres Browsers.



Detaillierte Informationen zur Konfiguration des TPG-25 entnehmen Sie der Online Hilfe des TPG Control Centers.
Um die Online Hilfe zu starten, wählen Sie das '?' Symbol an.



The latest version of the EC declaration of conformity can be downloaded from the homepage of SEH Computertechnik GmbH:

http://www.seh-technology.com/services/ce-notification.html

Manufacturer's Name SEH Computertechnik GmbH

Manufacturer's Address Suedring 11 33647 Bielefeld Germany Phone ++49 (0) 521 - 94226-0



#### EC - Declaration of Conformity

Herewith SEH Computertechnik GmbH declares that

Product: ThinPrint Gateway

Type designation: TPG-25

Serial No.: 262 yyyy mm nnnnn (yyyy = year, mm = month, nnnnn = seq. no.)

is in conformity with the provisions of the

DIRECTIVE 2004/108/EC OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL OF DEC. 15, 2004 on the approximation of the laws of the Member States relating to electromagnetic compatibility

DIRECTIVE 2011/65/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL OF 8 JUNE 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment

Standards applied:

EN 55024:1998 +A1:2001 +A2:2003 EN 55022:2006 +A1:2007 Class B

To meet the above specifications, the user has to comply with all instructions defined in the enclosed manual *Quick Installation Guide*.

Bielefeld, November 15, 2012 Dipl.-II

Kaiu Clllll Dipl.-Ing. Rainer Ellerbrake, General Manager

26 Quick Installation Guide

#### Federal Communication Commission (FCC) Notice

The user has to comply with all instructions defined in this manual. It is not allowed to do product modifications not expressly approved by SEH.

#### Note:

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no quarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Manufactured by:

SEH Computertechnik GmbH

Suedring 11 33647 Bielefeld

Germany

Scan this QR code (meCard) using your smart phone.

Phone: +49 (0)521 94226-29

Fax: +49 (0)521 94226-99

Support: +49 (0)521 94226-44

Email: info@seh.de

Web: http://www.seh.de

Document:

Type: Quick Installation Guide

Title: TPG-25 Version: 1.3

Order number: MHAB-OI-TPG25

#### Online Links to important Internet Resources:

Support Contacts and Information: <a href="http://www.seh-technology.com/support">http://www.seh-technology.com/support</a>
Sales Contacts and Information: <a href="http://www.seh-technology.com/sales">http://www.seh-technology.com/sales</a>

Downloads: http://www.seh-technology.com/services/

downloads.html



© 2013 SEH Computertechnik GmbH

All trademarks, registered trademarks, logos and product names are property of their respective owners. This product uses 'Open Source Software'. For further information, please contact <a href="http://www.seh.de">http://www.seh.de</a>. The product documentation gives you valuable information about your product. Keep the documentation for further reference during the life cycle of the product.